



GDC+ Flash card replacement



1. Power off the GDC+
2. Remove the plugs from the CPU board
3. Detach the two locking screws and use them as handles to unlatch the board.

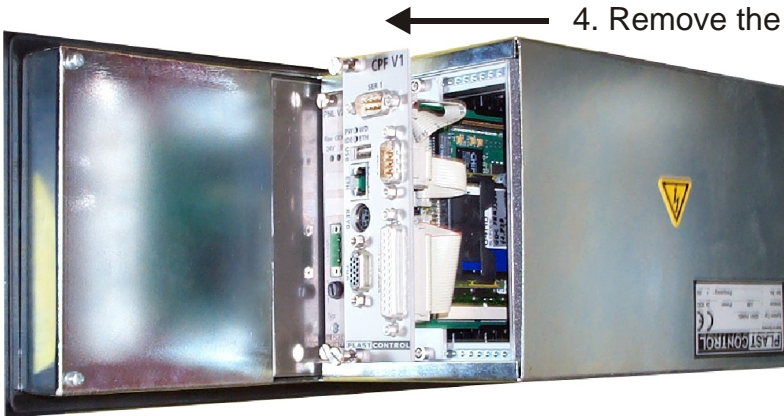

4. Remove the CPU board to access the Flash card

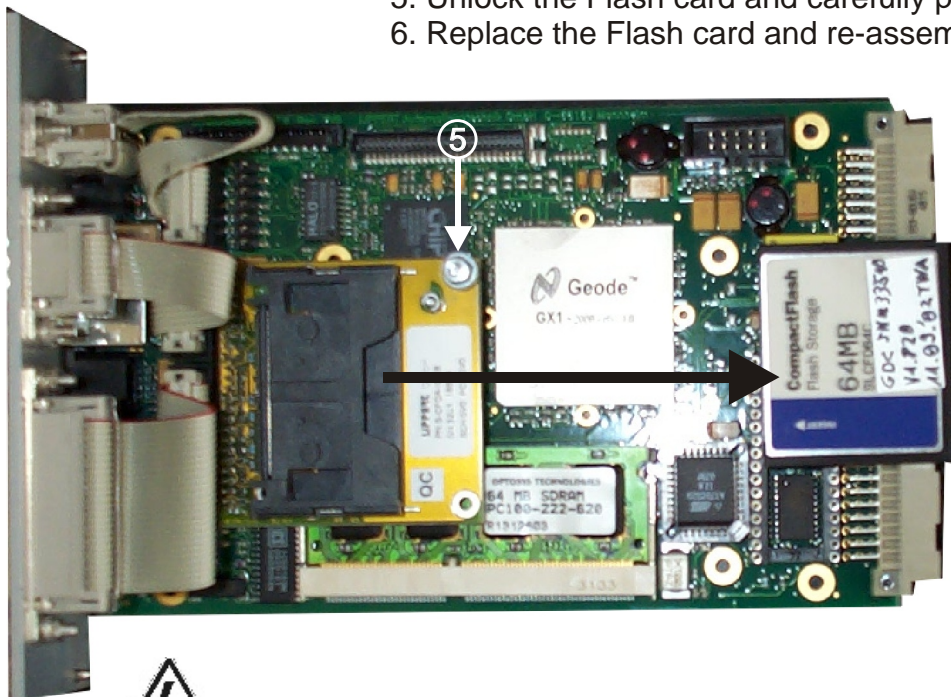

5. Unlock the Flash card and carefully pull it off the socket
6. Replace the Flash card and re-assemble



The electronic devices can be damaged by static electricity !