




Replacing the LMT nozzle

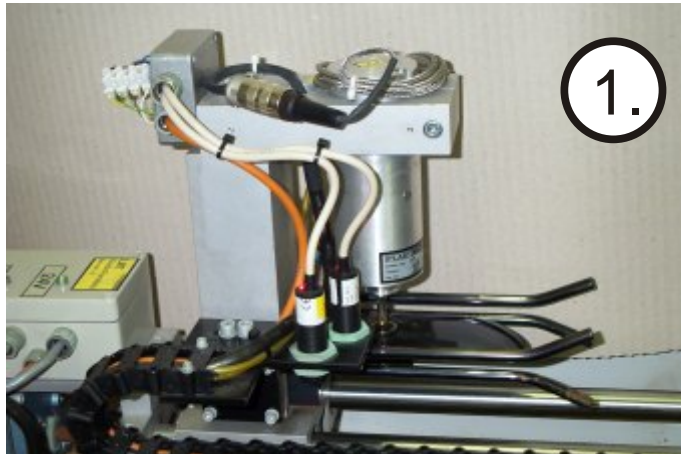


1.: Turn off the PC 8 power supply
Remove the LMT cover

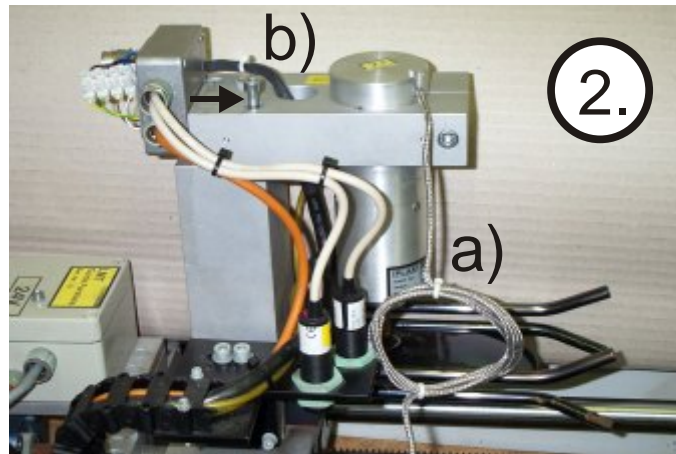


2.: a) Unplug the sensor plug
b) Unscrew the mounting bracket

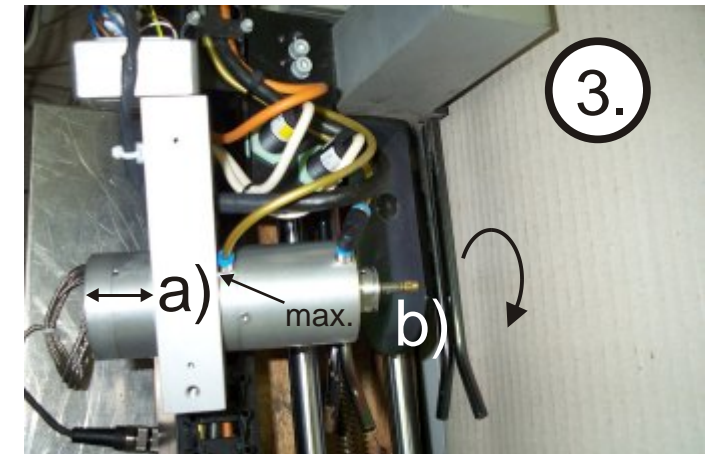

3.: a) Shift up the LMT sensor to max. position
Lock the sensor in max. position
b) Unscrew the old nozzle (counter-clockwise)

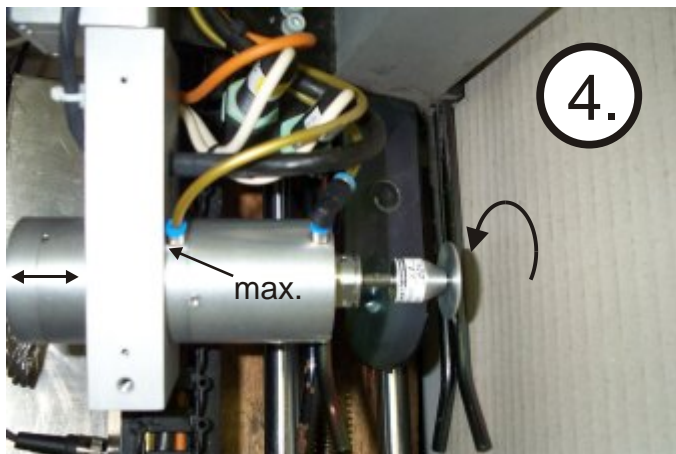

4.: Install the new nozzle (screw in clockwise).
With the new nozzle the LMT sensor must stay in max. position

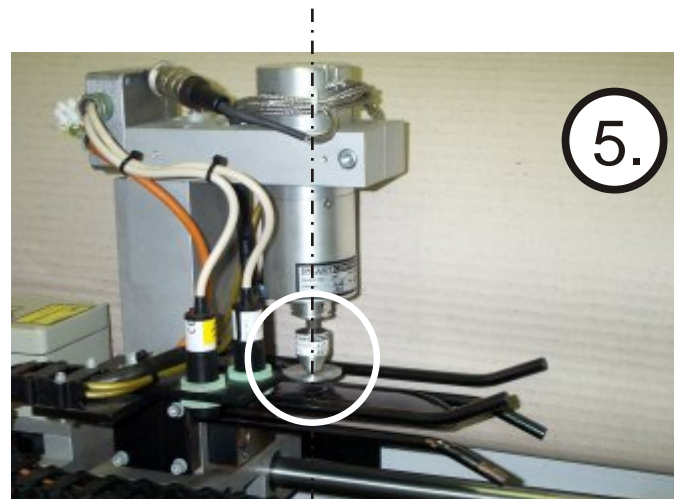

5.: Re-assemble the unit
Check for the alignment of nozzle and reference screw !

6.: see "LMT service instructions"
and check for PC8 pneumatic setup